

MENU	List	Faults		Total		
				Zones		
				Devices		
				Outputs		
				Remote object		
		Disables		Total		
				Zones		
				Devices		
				Outputs		
		Test		Zones		
				Zones status		
		Input's messages				
		Activated outputs		In fire mode		
				From input		
		Panel configuration				
		Panel parameters		Network		
				Local network	CAN local paremeters	
					CAN Remote objets	
		Lops		Loop 1	Loop parameter	
					List devices	
					Devices parameters	
				Loop 2	Loop parameter	
					List devices	
					Devices parameters	
		Zones				
		Devices status (temperatura senzorului)				
		Inputs				
		Arhives		Total		
				Fires		
				Faults		
				Inputs		
				Period	After date	
					Befor date	
		Between dates				
		Select Local/Remote panel				
	System functions	Disables		Zones		
				Devices	Loop 1	
					Loop 2	
				Outputs	Monitored outputs	
					Adress outputs lop 1	
					Adress outputs lop 2	
		Zone in test				
		Set clock				
		Set mode				
		Check Led and buzzer				
		Setup	Panel configuration			
			Panel parameters		Network	
			Local Network			
	Loops		Loop 1	Loop parameters		
				List devices		
				Devices parameters (alocare eticheta adresa)		
				Check (verificare bucal deschis /inchis/scurt/pana unde comunica)		
				Manual addressing		
				Loop 2		
			Loop parameters			
			List devices			
			Devices parameters			
			Check			
			Manual addressing			
	Zones					
	Inputs					
	Initialization		Initialization			
			Clear initialization			
			Readressing			
			Exclude devices			
			Check (dupa initializare verificare locatie adresa)			
	Checks		Monitored outputs			
			Relay outputs			
			Addressable outputs			
			Display			
			Buttons			
	New passwords		Level 2			
			Level 3			
	Default parameters					
	Clear arhives					